

Leader Light s.r.o. M.Gorkeho 33 SK-052 01 Spisska Nova Ves Slovakia www.leaderlight.eu

USER MANUAL

LLARC DOWNLIGHT 18 LL31 710 LL31 720

COMPLIMENTS ON YOUR PURCHASE!

All dimensions are in millimeters









Following items are included:

- LL ARC DOWNLIGHT 18 with 5m cable and 6pin LINE connector

1 pc. 1 pc.

- User manual

Additional items needed:

- ARC DRIVER

- DC power supply 24V
- Controller compatible with DMX

Content:

01 SAFETY INFORMATION

01.1 Risk of eyes damage

01.2 Protection from electric shock

01.3 Fire prevention

02 PRODUCT SPECIFICATION

02.1 Technical Specification

03 INSTALLATION

03.1 Unpacking

03.2 Physical installation

03.3 Electrical installation

03.3.1 Connecting to AC/DC power supply

03.3.2 Connecting to LL ARC DRIVER for intensity/colour control

04 MAINTENANCE

ENVIRONMENT





Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

01 SAFETY INFORMATION



WARNING!!!

Carefully read before installing, powering or servicing. Nothing to do if anything misunderstand! Installation can be done only by a qualified professional in accordance with relevant local codes.

01.1 Risk of eyes damage

- Do not look directly into LED lamps.
- Do not look into light beam from a distance of less than 40 cm (16 inches)!

01.2 Protection from electric shock

- Shut down power before installation or maintenance.

- Luminaries, Driver and recommended power supply must be installed by a qualified professional in accordance with relevant local codes. Only acceptable source of power and frequency that complies with local building and electrical codes to use.
- Do not use or do not connect the products if the power cable, power plug or fixtures are any
- way damaged, wet, or if they are overheating.

 Do not modify, alter, or attempt to service the LeaderLight appliance. Doing so will void the
- Before removing or installing any cover or part of appliance disconnect from power.

Operation only with DC 24V source! By using a high voltage AC power supply - danger of electric shock!

01.3 Fire prevention



- Thermostatic switches or fuses never to bypass.

- Device never shield. Around the axis of the fitting (180°) must be maintained space for
- LEDs never direct cover with filters or other materials.
- Allowing max. ambient temperature is 40°C (104°F).

02 PRODUCT SPECIFICATION

02.1 Technical Specification

Lamp type:	18 x Z5 *			
Lifetime:	Long 50 000 hrs 70% degradation			
Optic:	Standard: Fresnel optic 40-65° On request: 10°, 25°, 40°			
Control data Input:	1 channel 24V dimming			
Input power:	max. 20W			
Power connection:	24V DC 5m cable with 6pin LINE connector			
Net weight:	1kg			
IP:	IP20			
Ambient temp. (Ta):	Maximum 40°C			
Cooling:	Conventional			
Materials and finish:	Powder-painted anodized aluminium RAL9006 (other colours on request)			
Installation:	Recessed mounting			
*Z5: W-White (6300°K	(1), WW-Warm White (3000°K)			


03 INSTALLATION

03.1 Unpacking


- Unpack carefully.
- This is electronic equipment and should be handled carefully.
- Damaged delivered package or if are any mechanical parts broken it must be claim immediately by the transport company. Photo pictures as evidence are valuable for

03.2 Physical installation

- Loading capacity of bearing area has to be at least 10 times the weight of all device clusters (luminaries, clamps, cables, ...).
- Hairbreadth from combustible materials is 0.5m.

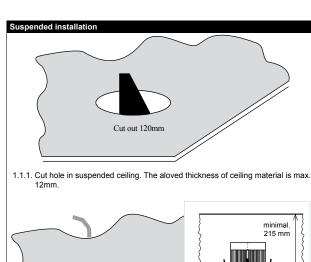



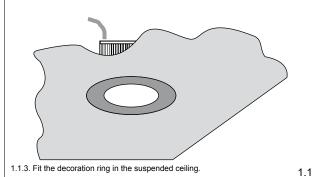

If you have any question please, contact support@leaderlight.sk

03.3 Electrical installation

- To tackle all Safety Information- 01!
- You can suffer a dangerous electric shock by using a high voltage AC/DC power supply - by touching the AC/DC power supply wires inside LL ARC DOWNLIGHT 18!

 - LL ARC DOWNLIGHT 18 can be operated in two ways:

 - 03.3.1 LL ARC DOWNLIGHT 18 connecting to DC POWER SUPPLY - for switch

- 03.3.2 LL ARC DOWNLIGHT 18 connecting to LL ARC DRIVER for intensity and colour control

03.3.1 Connecting to DC power supply (Figure Nr. 2.1)

- LL ARC DOWNLIGHT 18 must be connected to the device- MW power supply In:100-
- It is not necessary to open fixture before connecting to MW power supply.

AC Power Supply Cord plug connections to MW Power Supply:


Symbol	Pin	Wire Colour	Screw (US)
L	live	brown	yellow or brass
N	neutral	blue	silver
+	ground (earth)	yellow/green	green

03.3.2 Connecting to LL ARC DRIVER (Figure Nr. 2.2)

- For intensity and colour control is necessary connection with LL ARC DRIVER.
- It is not necessary to open fixture before connecting to LL ARC DRIVER.
 Before installing of LL ARC DRIVER carefully read USER MANUAL for LL ARC DRIVER.

04 MAINTENANCE



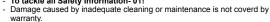

- Regular cleaning is demand (dust, dirt, ...).

Maintenance policy:

- Unplug mains before maintenance and at least 10 minutes cool off
- Appliance do not illegal open or demount
- Clean-up dust only from outer surface (for ex. diffuser).
- Use vacuum or dumpy duster (warm water)
- Before reinstalling to check failure-free state no wet parts!

	DC 24V POWER SUPPLY MW 240 DIN 24V max. 10A 100-260V AC	
enables t	ng LL ARC DOWNLIGHT 18 to DIN POWER SUPPLY o switch ON/OFF luminaries.	2.1

LL ARC DOWNLIGHT 18 connecting to DIN POWER SUPPLY

LL ARC DOWNLIGHT 18 connecting to ARC DRIVER and DIN POWER SUPPLY

	DMX CONTR. DC 24V max. 10AI POWER SUPPLY MW 240 DIN 24V 100-260V AC	
C to	Connecting LL ARC DOWNLIGHT 18 to PWM DRIVER and DIN POWER SUPPLY enables o switch ON/OFF luminaries and in addition intensity and colour control by DMX controller.	2.2

